

PMI - Display in Views

Monday, December 07, 2015

Piotr Szymanczyk

- Select the **existing PMI** feature or features in a view from the **"Part Navigator"/"Model Views"**.
- **Right click**, and select **"Display"**, and then **"in Views"**
- After opening **"Display in Views"** dialog box, **select or deselect** of displaying the required in the views PMI features.
- Then click **"Apply"**

